


Master pin drill unit mpb 1

Precision combined with economic efficiency

- Powerful, high quality, maintenance-free, precise
- Modern technology for reliable and simple precision of drilling
- Developed in cooperation with master dental technician Mr. Thomas H. Wendler who added his experience on the fabrication of models gained in his activity as a trainer over more than 10 years. The result is a high-precision unit which features simple and convenient operation and improves the quality of dental restorations.



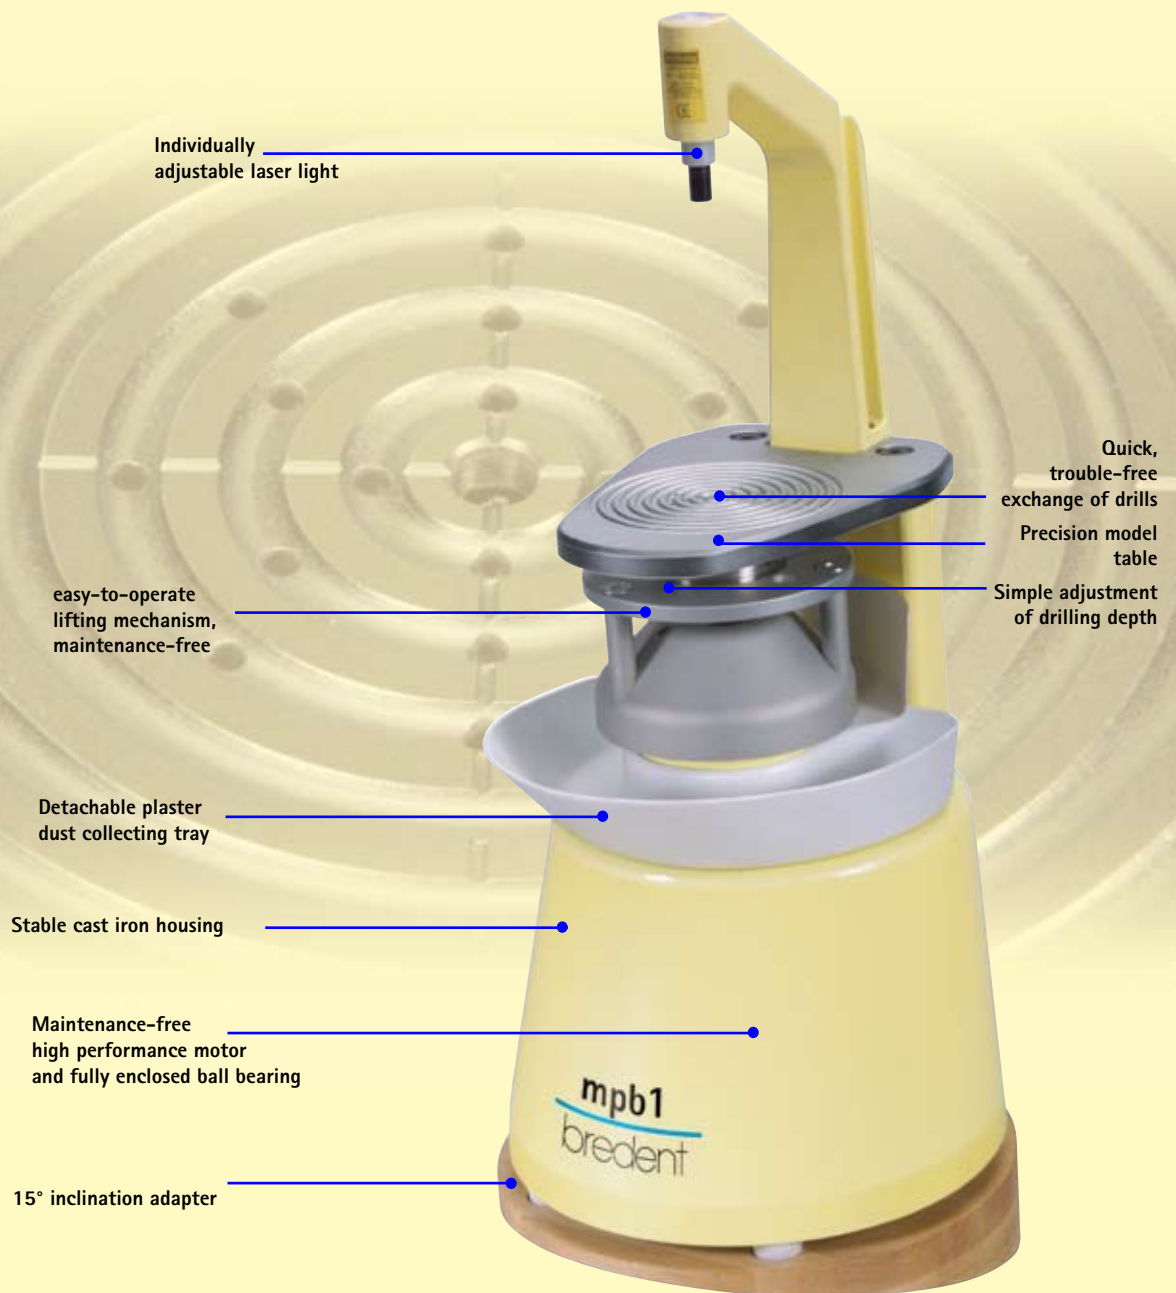


The diameter of the luminous spot can be adjusted individually to ensure anti-dazzling, precise focusing.



Firmly mounted model table with shape and width adapted to the arch.




Guidelines on the model table allow specific alignment of the model for exact planning of pin holes.

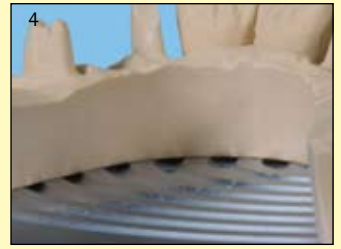


Integrated grooves collect plaster particles and provide the precondition for arches which rest parallelly.



Master-Pin Diatit tungsten carbide step drill standard/green
3 mm shaft, 1,5/2, 1 piece
Order No. 360 0119 2

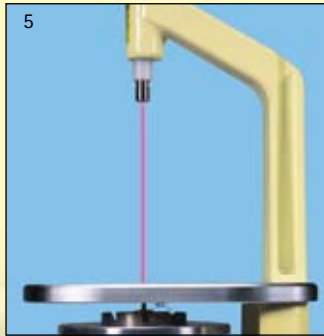

Exact model table mounted at an angle of 90° to the drill subsequently ensures simple removal of the arch from the model base.

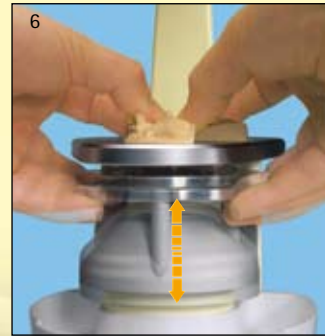

The firm hold of the arch allows precise drilling of pin holes. The drill is directed to the arch without any vibration.



The enclosed plug axle permits simple adjustment of the drilling depth.



Drills are exchanged without the need to open the unit.



Any resulting plaster particles are automatically collected by the projecting collecting tray.



Unit, motor and collet remain clean, the collecting tray can be removed.



Accessories:
Adapter base
„15° inclination“/precious wood for mpb 1
Order No. 210 0044 0



Pin drill unit mpb 1 Standard
(without 15° base)
Order No. 140 0092 0